



MOTOROLA SOLUTIONS

PROFESSIONAL DIGITAL TWO-WAY RADIO

MOTOTRBO™

DP4000/DP4000e SERIES

PORTABLE RADIOS

QUICK REFERENCE GUIDE

en-US



JULY 2017

© 2017 Motorola Solutions, Inc. All rights reserved.



68012007019-GD

Your Quick Reference Guide

This Quick Reference Guide covers the basic operation of the radio. Check with your dealer or system administrator because your radio may have been customized for your specific needs.

For more operational details and information on warnings and safety, refer to the following User Guides:

<i>Full Keypad Portable</i>	68012007015
<i>Limited Keypad Portable</i>	68012007023
<i>Non-Keypad Portable</i>	68012007022

Important Safety Information

RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios

Product Safety and RF Exposure Compliance



Caution: Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.

ATTENTION!

This radio is restricted to Occupational use only. Before using the radio, read the RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios which contains important operating instructions for safe usage and RF energy awareness and control for Compliance with applicable standards and Regulations.

For a list of Motorola Solutions-approved antennas, batteries, and other accessories, visit the following website:

<http://www.motorolasolutions.com>


Computer Software Copyrights

The Motorola Solutions products described in this manual may include copyrighted Motorola Solutions computer programs stored in

semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola Solutions certain exclusive rights for copyrighted computer programs including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program.

Accordingly, any copyrighted Motorola Solutions computer programs contained in the Motorola Solutions products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola Solutions. Furthermore, the purchase of Motorola Solutions products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola Solutions, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.

Radio Controls

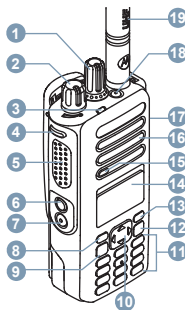

- 1 Channel Selector Knob
- 2 On/Off/Volume Control Knob
- 3 LED Indicator
- 4 Programmable Side Button 1
- 5 Push-to-Talk (PTT) Button
- 6 Programmable Side Button 2
- 7 Programmable Side Button 3
- 8 Programmable Front Button P1¹
- 9 Menu/OK Button¹
- 10 4-Way Navigation Button¹
- 11 Keypad^{1 2}
- 12 Back/Home Button¹
- 13 Programmable Front Button P2¹
- 14 Display¹
- 15 Microphone
- 16 Speaker
- 17 Universal Connector for Accessories
- 18 Antenna
- 19 Antenna Mounting Bracket

¹ Not for Non-Keypad models.

18 Programmable Emergency Button

19 Antenna

Attaching the Battery



Notice: For optimal performance, charge a new battery 14 to 16 hours before initial use.

- 1 Align the battery with the rails on the back of the radio.
- 2 Slide the battery upwards until the latch snaps into place.
- 3 Lock the battery latch.

Attaching the Antenna

- 1 Turn off the radio.
- 2 Set the antenna in the receptacle and turn clockwise.

Powering On/Off the Radio

Rotate the **On/Off/Volume Control Knob** clockwise or counterclockwise until a click sounds.

Adjusting the Volume

Rotate the **On/Off/Volume Control Knob** clockwise or counterclockwise.

LED Indicators

Blinking Red

Radio has failed the self-test upon powering up, has moved out of range if Auto-Range Transponder System is configured, has Mute mode enabled, is receiving an emergency transmission, is transmitting in low battery state, or is indicating a battery mismatch.

Solid Green

Radio is powering up, is transmitting, or is sending a Call Alert or an emergency transmission.

Blinking Green

Radio is receiving a call or data, is detecting activity over the air, or is retrieving Over-the-Air Programming transmissions.

Double Blinking Green

Radio is receiving a privacy-enabled call or data.

Solid Yellow

Radio is monitoring a conventional channel, or is in Bluetooth Discoverable Mode.

Blinking Yellow

Radio is scanning for activity, is receiving a Call Alert, has Flexible Receive List enabled, or all Capacity Plus-Multi-Site channels are busy.

Double Blinking Yellow

Radio has Auto Roaming enabled, has yet to respond to a Group Call Alert, is actively searching for a new site, is not connected to the repeater while in Capacity Plus, is locked, or all Capacity Plus channels are busy.

Display Icons

The following icons appear on the status bar at the top of the radio display. The icons are arranged left most in order of appearance or usage, and are channel-specific.



Emergency

² Not for Limited Keypad models.

Scan³

High Volume Data



Mute Mode



Tones Disabled



Ring Only



Vibrate and Ring



Notification



Response Inhibit



Secure



Unsecure



Site Roaming



Option Board



Power Level



Sign In



Sign Out

³ Not available for Capacity Max.

www.motorolasolutions.com/mototrbo

Printed in

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners. © 2012 and 2017 Motorola Solutions, Inc. All rights reserved.

